

WE ALSO CARRY:

- Water Level Meters
- Data Loggers
- Interface Meters
- Conductivity Meters
- Temperature Meters
- Well Casing Indicators

 
Coming Soon:

- Borehole Inspection Camera
- Conductivity Logger

HERON INSTRUMENTS INC.

447 Moxley Road | Dundas, ON Canada L9H 5E2
1-800-331-2032 | info@heroninstruments.com

Please visit our website www.heroninstruments.com
for more information on the complete Heron line.




Well Depth Indicator Probe

Operating and Maintenance Instructions



www.heroninstruments.com

Well Depth Indicator Probe Instructions

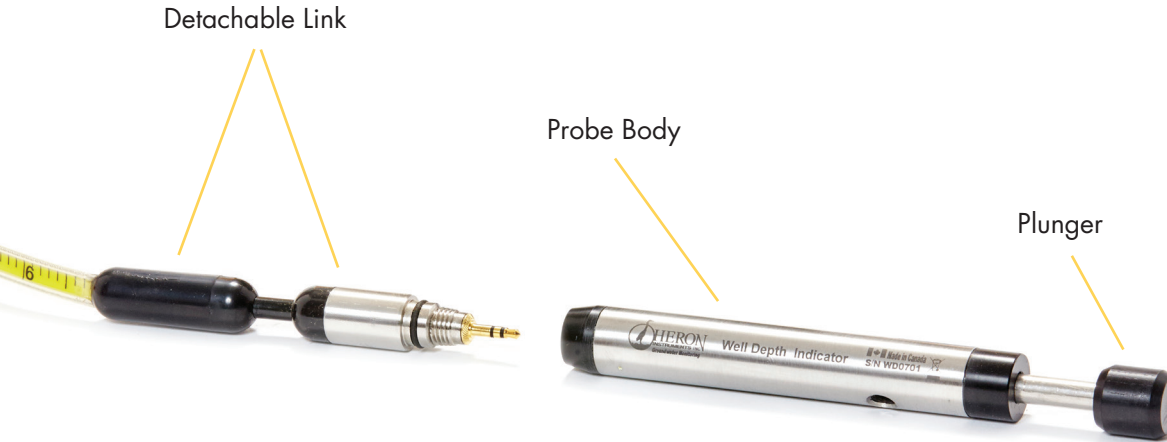

Item

Detachable Link
Well Depth Indicator Probe

Part Numbers

1412
1502

Step 1:

Remove the **Water Level Meter Probe** from the Detachable Link and replace with the **Well Depth Indicator Probe**. Make sure the connection is tight (do not over tighten).

Step 2:

While the **dipper-T** is in water level meter mode, lower the probe down the side of the casing (use the tape guide to protect the tape from sharp edges). When the **Well Depth Indicator Probe** reaches the bottom of the well, the pressure sensitive plunger enters the probe body closing a switch, initiating an audible and visual signal at the top of the well. The well depth reading is taken directly from the tape. *Note: The datum point indicator is on the back of the probe holder.*

For general care, equipment checks, cleaning and warranty information please refer to the **dipper-T Water Level Meter with drawDown Operating and Maintenance Instructions** or visit our website www.heroninstruments.com.

Warranty is conditional upon adherence to these guidelines.