



HydraGO QuickStart


HydraGO Portable Soil Sensor



Stevens Water Monitoring Systems, Inc.
12067 NE Glenn Widing Drive, Ste. 106
Portland, Oregon, 97220, USA
www.stevenswater.com


1

Power and Lights

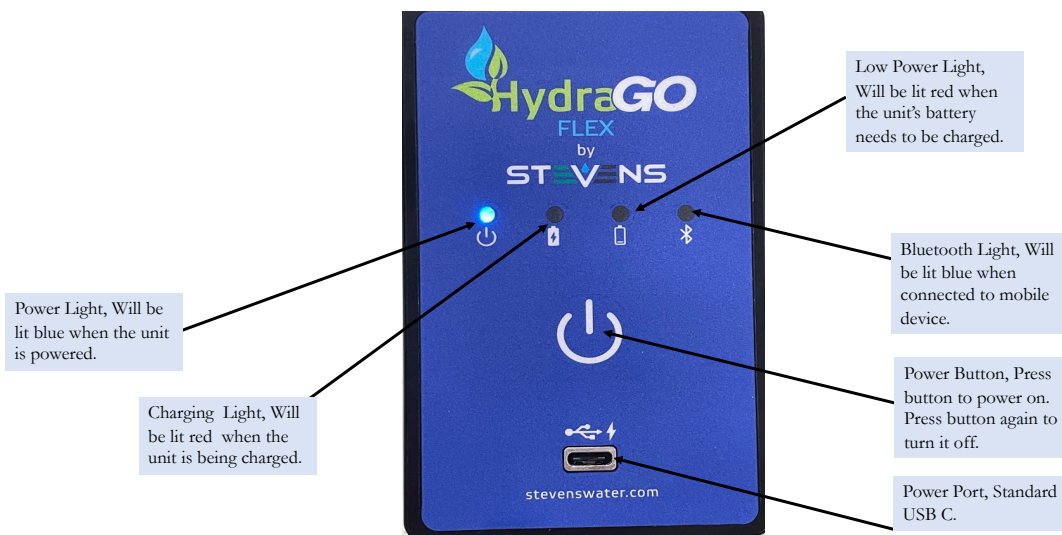


2


The HydraGO App is available for Apple iOS and Android and works for both HydraGO and HydraGO FLEX. Open the HydraGO App the App will connect to the unit via Bluetooth automatically if a single unit is powered. Multiple power units will show up in the menu.



For Apple iOS, you can click the "E" symbol in the upper left part of the screen to rescan for devices or connected to a different device. Click back button for android.

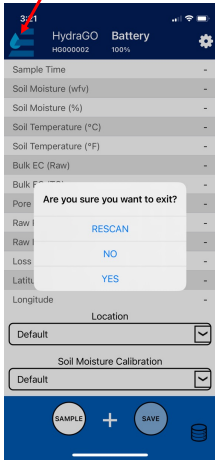


Hit the sample button on the lower left part of the screen to take a reading. Tap the Save button to save the sampled data or tab the "+" button to sample and then save the data.

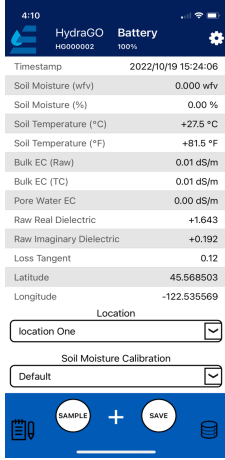


3


Click the pencil/notepad icon to write memo or note about the sampled reading. This note will appear in the csv file on the same row as the sampled data.

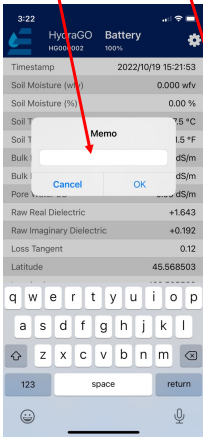


Click the database icon to see stored data.

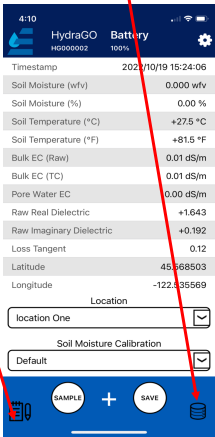


After you click the database icon, you then have the option to email the csv file to a destination email address. Note that the HydraGO app only uses the email app that is native to the mobile device and an email account need to be setup in the email app.

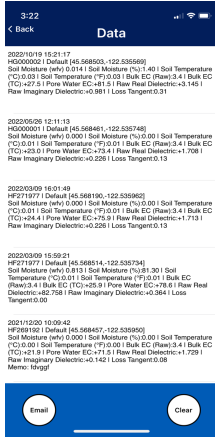


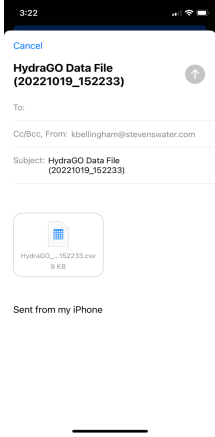

4

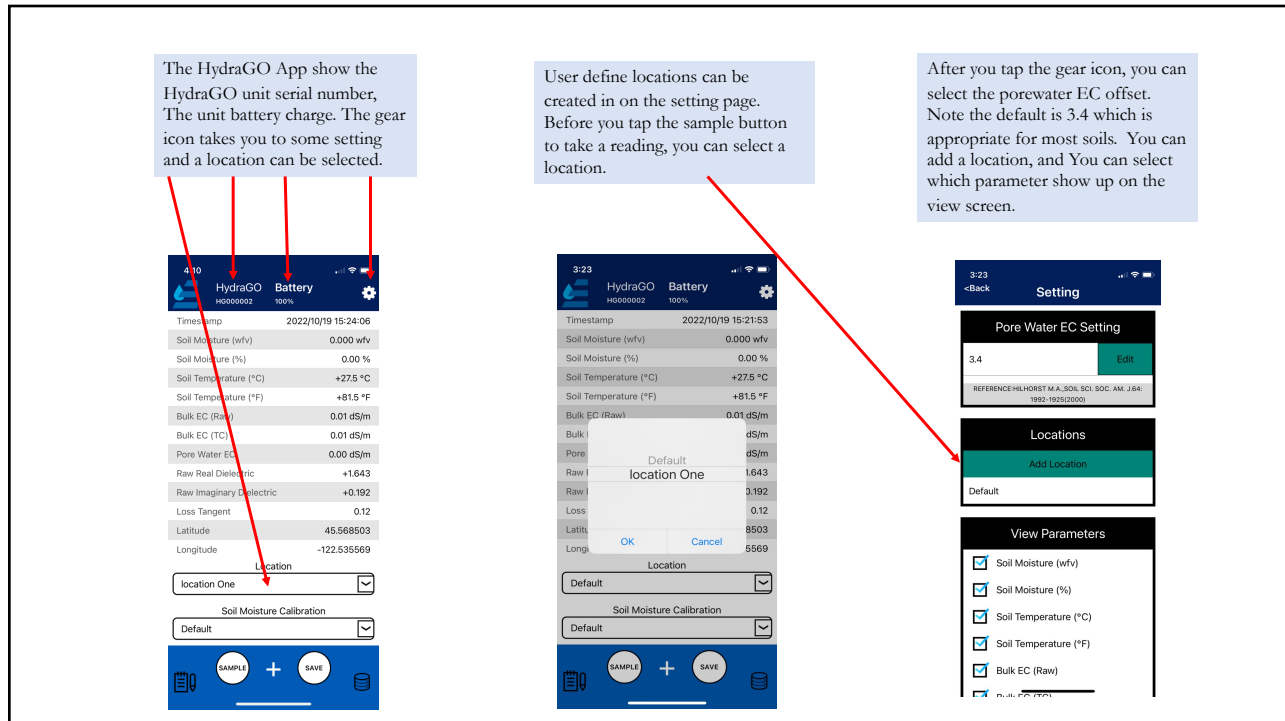

5

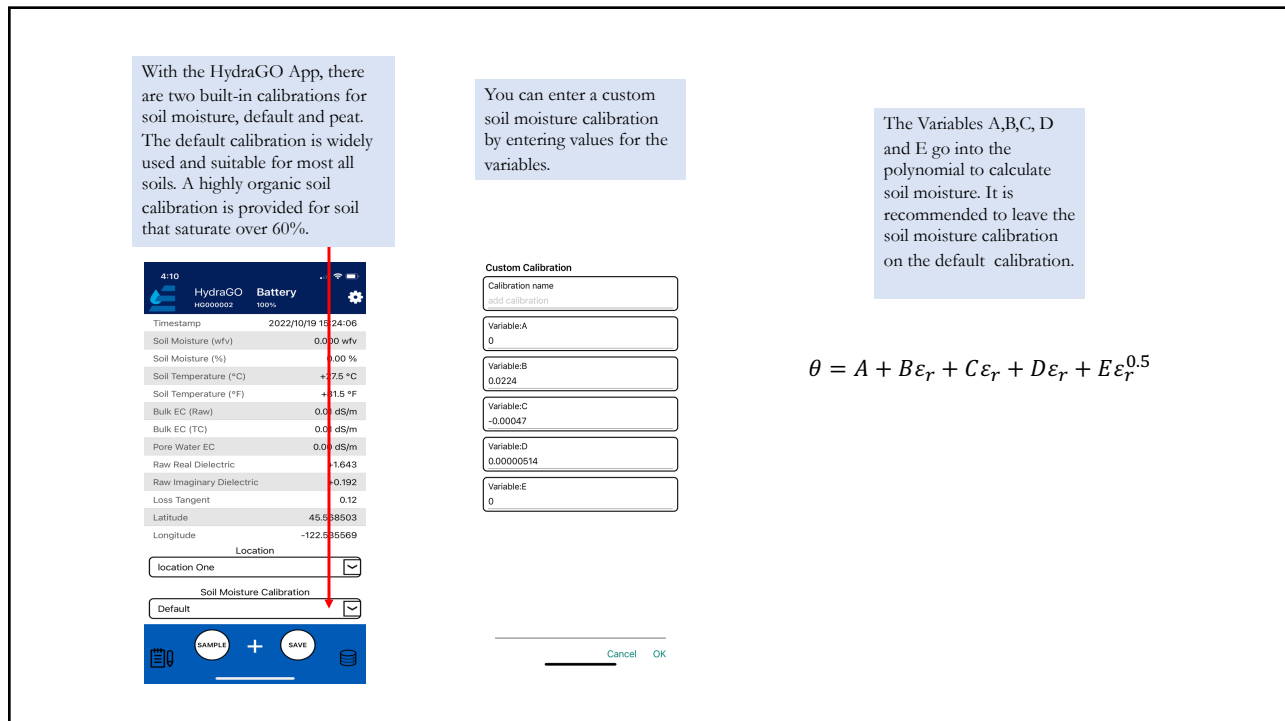

6